


Maintenance Instructions*

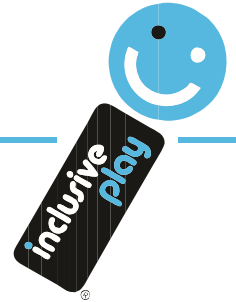

The advised frequency of the following actions is for your information and guidance only. They should vary according to: the installation site, the age of the equipment and the level of usage. During installation and ongoing maintenance of play equipment, please check that the risk of entrapment conforms to the latest European regulations. *Some product lines may have a specific maintenance document for that product, please check accordingly.

Frequency	What to Do	Items required	Maintenance
Every month	<ul style="list-style-type: none"> Routine visual inspection to identify any risks stemming from acts of vandalism, use or unusual weather conditions. Inspect tightness of bolts and fixings. Check for missing or broken parts. Ensure all protective covers are in place. Inspect surfacing below equipment. 	<ul style="list-style-type: none"> Loctite Grade 2700 Spare parts are available Pin Hex Allen Key M8, M10, M12 Surfacing 	<p>If fixings are loose or not tight, consider replacing the fixings. Loctite Grade 2700 must be used to adhere the fixings.</p> <p>Ensure surfacing conforms to EN1177.</p>
Every 3 months	<ul style="list-style-type: none"> Functional check to make sure that the equipment, or the part concerned is operating correctly. Check all fixings, joints and stability of equipment and tighten or replace if necessary. Check all parts for wear and tear. Thorough cleaning of equipment and any galvanised steel parts. 	<ul style="list-style-type: none"> Spare parts are available Pin Hex Allen Key M8, M10, M12 Water and detergent High pressure cleaner Abrasive sponge Loctite Grade 2700 Zinc Galvanizing Spray Wetpour rubber HDPE Parts 	<p>If there is evidence of scratched galvanizing, protect this with Zinc Galvanizing Spray.</p> <p>If fixings are loose or not tight, tighten or consider replacing the fixings. Loctite Grade 2700 must be used to adhere the fixings.</p> <p>Carry our wetpour repairs or replace if necessary.</p> <p>HDPE – Spare parts available.</p> <p>Ensure foundations are stabilised and secure, reinstate foundation if not.</p>
Every 12 months	<ul style="list-style-type: none"> Inspect the anchoring system. Inspect moving parts. Check overall condition of paintwork - repaint if necessary. Check chains for wear or damage. Ensure moving parts such as bearings or tensioning systems are flowing correctly and free from obstruction. Ensure ropes are in a good condition. 	<ul style="list-style-type: none"> Spray Paint, Paintbrush Loctite Grade 2700 Zinc Galvanizing Spray Spare Parts Waterproof Grease 	<p>If there is evidence of scratched galvanizing, protect this with Zinc Galvanizing Spray. Repair galvanizing by removing all corrosion, spray and replace parts if necessary.</p> <p>If fixings are loose or not tight, tighten or consider replacing the fixings. Loctite Grade 2700 must be used to adhere the fixings.</p> <p>If chains are worn more than 50% these must be replaced.</p> <p>Grease bearings using the grease nipple provided.</p> <p>If steel cores are visible from ropes, these must be replaced.</p>

Maintenance Records

The advised frequency of the following actions is for your information and guidance only. They should vary according to: the installation site, the age of the equipment and the level of usage. During installation and ongoing maintenance of play equipment, please check that the risk of entrapment conforms to the latest European regulations.



Product	Date	Notes	Action